

## Product Description

The bks+ ultrasonic web edge sensor is a fork sensor for scanning the edges of sound-impermeable materials such as foil or paper. The fork's lower leg is equipped with an ultrasonic sensor which cyclically emits short sound impulses, which are detected by the ultrasonic receiver accommodated in the upper fork leg. Material immersing into the fork covers this sound path and thus attenuates the receive signal, which is evaluated by the internal electronics. An analogue signal is output in dependence of the coverage degree. Using the LinkControl-Adapter LCA-2 and LinkControl software, the switched output can be programmed in window mode around the zero position.

The bks+ sensors are IO-Link-capable in accordance with IO-Link specification V1.1.

- Via the Teach-in button on the edge sensor's top, the sensor can be adjusted to the material to be controlled.
- Choosing between rising and falling output characteristic is possible.
- Three LEDs indicate the position of the web material inside the fork.

## Safety Notes

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried out by expert personnel.
- No safety component in accordance with the EU Machine Directive.

## Installation

- Mount the sensor at the installation site.
- Connect a connection cable to the M12 device plug.
- For optimum measurement results the sensor should be mounted thermally conductive.

## Start-Up

- Connect the power supply.
- Carry out the adjustment in accordance with the diagram.

## Synchronisation

If two or more edge sensors are mounted in a distance < 400 mm the internal synchronisation should be used. Connect Sync-channels (Pin

5 at the units receptacle) of all sensors.

## Factory setting

- Analogue output on voltage output.
- Rising analogue characteristic (0 V at maximum coverage).
- Switched output on NCC.
- Switched output window is  $\pm 1,5$  mm around zero position.

## Maintenance

microsonic sensors are maintenance-free. With heavy dirt deposits, we recommend a cleaning of the white sensor surface.

## Note

- For optimum measurement results the material to be detected should be kept in a range of  $\pm 5$

mm around the centre between the upper and lower fork leg.

- Using the LinkControl-Adapter LCA-2 (optional accessory) and the LinkControl-Software V7.6 all Teach-in- and additional sensor parameter settings may be made.
- Depending on the function the ultrasonic transducers in the upper and lower fork leg are mounted with a slope of 2°.



2014/30/EU

## Operating Instructions

### bks+3/FIU

### Ultrasonic web edge sensor with analogue output and IO-Link interface

## Sensor adjustment with Teach-in procedure

### 2-point adjustment

### 1-point adjustment

Completely free the fork from the web material.

Align the web edge inside the fork with the mark to obtain a 50 % coverage of the sound path.

Press push-button for ca. 3 s<sup>1)</sup>, until the green LED and +LED flash simultaneously.

Press push-button for ca. 6 s<sup>1)</sup>, until the green LED and -LED flash simultaneously.

Wait for 2 s.

Cover the sound path completely with web material.

Press push-button for ca. 1 s<sup>1)</sup>

### Normal mode operation

Adjust sensor to web edge

<sup>1)</sup> or connect Pin5 (Sync/Com) to +U<sub>B</sub>

### Set analogue output

### Lock push-button

### Factory setting

Press push-button for ca. 13 s<sup>1)</sup>, until the +LED and -LED flash simultaneously.

Keep push-button pressed for ca. 3 s<sup>2)</sup>, until green LED and +LED simultaneously flash quickly.

Keep push-button press for ca. 13 s<sup>2)</sup>, until the green LED flashes quickly.

green LED: flashes  
The function of the analogue output is displayed:  
+LED on, -LED off: 0-10 V, rising  
+LED on, -LED off: 0-10 V, falling  
+LED off, -LED on: 4-20 mA, rising  
+LED off, -LED off: 4-20 mA, falling

green LED: flashes  
-LED: off  
+LED: on: push-button active  
off: push-button locked

Release push-button within 5s<sup>3)</sup>, whilst supply voltage is ON.

To change output function press push-button for ca. 1 s<sup>1)</sup>.

To change setting press push-button for ca. 1 s<sup>2)</sup>.

Wait for 10 s.


Wait for 10 s.

### Normal mode operation

Further settings

<sup>2)</sup> or connect Pin5 (Sync/Com) to -U<sub>B</sub> <sup>3)</sup> or disconnect Pin5 (Sync/Com) from -U<sub>B</sub>

## Technical data

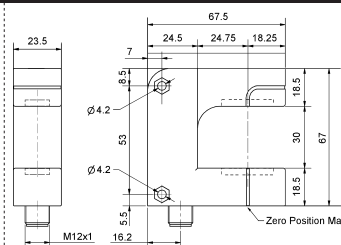

fork width 30 mm  
fork depth 43 mm  
operating range min. 12 mm ( $\pm 6$  mm)  
transducer frequency 170 kHz  
resolution < 0.005 mm  
operating voltage U<sub>B</sub> 20 to 30 V DC, reverse polarity protection  
voltage ripple  $\pm 10$  %  
no-load current consumption  $\leq 60$  mA  
housing zinc die cast lacquered, plastic parts: PBT  
ultrasonic transducer: polyurethane foam, epoxy resin with glass contents  
IP 65

class of protection to EN 60 529  
type of connection 5-pin M12 initiator plug, brass, nickel-plated

controls Teach-in-button  
indicators LED green: centre or within switching window  
LEDs yellow: deviation from centre/switching window

 
programmable LCA-2 with LinkControl  
synchronisation internal synchronisation up to 10 sensors  
operating temperature +5°C to +60°C  
storage temperature -40°C to +85°C

weight 190 g  
response time 5.1 ms  
repetition rate 4 ms

time delay before availability < 300 ms  
order no. bks+3/FIU

analogue output current output 4-20 mA  
voltage output 0-10 V

switched output short-circuit-proof, switchable rising/falling  
Push-Pull, U<sub>B</sub>-4V, -U<sub>B</sub>+2 V, I<sub>max</sub> = 100 mA  
switchable NOC/NCC; short-circuit-proof



1 Push-Pull switched output and analogue output

The bks+ sensors are IO-Link-capable in accordance with IO-Link specification V1.1 and compatible to V1.0.

#### Note

- In IO-Link mode Teach-in and Link-Control are not available.

#### Process data

The bks+ cyclically transmits the value corresponding to the measured coverage degree with a resolution of 0.003 mm.

#### Service data

The following sensor parameters may be set via IO-Link.

#### Teach-in via push-button

The push-button can be activated/deactivated for sensor settings with Teach-in.

#### Linearisation of the output characteristic

To increase the absolute accuracy in the edge areas, the linearisation of the output characteristic can be disabled.

#### Temperature compensation

The temperature compensation is used for measurement value correction for varying ambient temperatures and can be disabled.

#### Analogue output mode

For the analogue output either the function output voltage or current output can be selected.

#### Rising / falling analogue characteristic

The analogue characteristic can be set on rising (0 V / 4 mA at full coverage) or falling characteristic.

#### Set NOC/NCC

The NCC or NOC output function can be present for the switched output.

#### Switching off the LEDs

When activated, the LEDs are switched off 30 seconds after a key press. After a new key press they will run for 30 seconds. This automatic shutdown can be deactivated.

#### Measurement filter

bks+ ultrasonic sensors provide for a choice of 3 filter settings:

- F00 (no filter)
  - Each ultrasonic measurement acts on the output in an unfiltered manner.
- F01 (average value filter)
  - Forms approximately the arithmetic mean of several measurements. According to the mean value the output is set. The number of measurements, from which the mean is formed is dependent on the chosen filter strength.
- F02 (median filter)
  - Finds the median of several measurements. According to the median the output is set. The number of measurements, for which the median is determined is dependent on the selected filter strength.

#### Filter strength

For each measurement value filter, a filter strength between P00 (weak filter effect) and P09 (strong filter effect) can be selected.

#### Switching window

If the web edge is within the switching window the switching output is set. The switching window is defined by the adjusted center and the width.

#### Note

The switching window has to be completely within the operating range.

#### System commands

With 5 system commands the following settings may be carried out:

- restore IO-Link parameter
- sensor adjustment: fork cleared.
- sensor adjustment: fork 50 % covered
- sensor adjustment: fork 100 % covered
- Reset to factory settings.

#### Events

The bks+ sensor sends the following events:

- parameter was changed
- sensor adjustment successful
- sensor adjustment failed

#### IODD file

The latest IODD file you will find on the internet under [www.microsonic.de/en/IODD](http://www.microsonic.de/en/IODD).

For further informations on IO-Link see [www.io-link.com](http://www.io-link.com).

#### IO-Link Data

physical layer		bks+3/FIU		
IO-Link revision	V1.1			
compatibility	V1.0			
block parameter	yes			
data storage	yes			
SIO mode support	yes			
min cycle time	4 ms			
baud rate	COM 2			
format of process data	16 Bit, R, UNI16			
content of process data	Bit 0-15: degree of coverage with 0.003 mm resolution			
<b>service data IO-Link specific</b>				
index		access	value	
vendor name	0x10	R	microsonic GmbH	
vendor text	0x11	R	www.microsonic.de	
product name	0x12	R	bks+	
product ID	0x13	R	bks+3/FIU	
product text	0x14	R	Ultraschall-Sensor	
<b>service data sensor specific</b>				
index	format	access	range	default
Teach-in via push-button	0x40	UINT8 R/W	0: activated; 1: deactivated	0
linearisation of the output characteristic	0x41	UINT8 R/W	0: deactivated; 1: activated	1
temperature compensation	0x42	UINT8 R/W	0: deactivated; 1: activated	1
analogue output mode	0x44	UINT8 R/W	2: current output, 3 : voltage output	3
rising/falling output characteristic curve	0x45	UINT8 R/W	0: rising characteristic curve; 1 : falling characteristic curve	1
NCC/NOC	0x46	UINT8 R/W	0: NOC; 1 : NCC	1
automatic turning-off LEDs	0x48	UINT8 R/W	0: deactivated; 1: activated	1
measurement filter	0x4D	UINT8 R/W	0-2: F00-F02	0
filter strength	0x4E	UINT8 R/W	0-9: P00-P09	0
centre of switching window	0x4F	UINT16 R/W	0-4095 <sup>1)</sup>	2047
width of switching window	0x50	UINT16 R/W	0-4095 <sup>1)</sup>	1023
<b>system commands</b>				
index		access	value	
restore IO-Link parameter	0x02	W	130	
sensor adjustment: fork cleared	0x02	W	161	
sensor adjustment: fork 50 % covered	0x02	W	162	
sensor adjustment: fork 100 % covered	0x02	W	163	
reset to factory setting	0x02	W	164	
<b>events</b>				
code	type	name		
0x8ca0	Notification	parameter was changed		
0x8ca1	Notification	sensor adjustment successful		
0x8ca2	Notification	sensor adjustment failed		
<b>observe</b>				
index	format	access	range	
measurement value	0x54	UINT16;R	0-4095	

<sup>1)</sup> Measurement values are expressed as multiples of the internal resolution of about 0.003 mm.