# microsonic



**Operating Instructions** 

Ultrasonic double sheet detection with 2 switched outputs

dbk+4/3CDD/M18 E+S dbk+4/3BEE/M18 E+S dbk+4/WK/3CDD/M18 E+S dbk+4/WK/3BEE/M18 E+S dbk+4/M18/3CDD/M18 E+S dbk+4/M12/3CDD/M18 E+S dbk+4/M12/3BEE/M18 E+S

## **Functional principle**

The function of the double sheet detection is to detect two or more sheets or other flat materials lying one on top of the other. The sensor system consists of a transmitter and a receiver complete with integrated evaluation electronics.

A high-frequency ultrasonic transmitter beams from the underside against the sheet material. The emitted ultrasonic pulse excites the sheet material into vibrations. The effect of these vibrations is for a very small sonic wave on the other side of the sheet to spread. This wave is received by the ultrasonic receiver located there. In the case of sheet one on top of the other (double sheet), the receiver detects the difference in signal and sets its outputs accordingly.

# Product description

 Assured detection of single, double and multiple sheet.

- Scanning of the most varied of materials – from thin Washi through to wafers.
- Double sheet and missing sheet output as pnp or npn switched outputs.
- Scanning of sheet material weights from <20 g/m<sup>2</sup> to 1,200 g/m<sup>2</sup>; films, thin sheet metals and finest corrugated cards possible.
- Vertical mounting to the sheet running through permitted.
- Three control inputs allow for an external setting of sensitivity for the material to be scanned.
- Changes to sensitivity classes under ongoing operations can be undertaken.
- Additional teach-in mode e.g. for scanning wafers glued with a water film.
- Optional trigger operation mode e.g. for applications in the shingled stream.
- Parameterization via LinkControl
- 0.5 ms response time until a double or missing sheet in the trigger mode is detected.
- Transmitter-receiver spacing can be selected from 20 to 60 mm.

## Safety tips

- Read the operating instructions before start-up.
- Only qualified personnel are to undertake connection, mounting and settings.
- Not a safety component in keeping with the EC Machinery Directive.

## Mounting

- → Mount transmitter and receiver in keeping with Fig. 3 at the recommended spacing of 40 mm ±3 mm (or 20 mm ±2 mm with dbk+4/ M12/...E+S).
- dbk+4 can be fitted at any position.
- → Connect the transmitter to the receiver using the M8 connector.
- → Connect the receiver 7 core control line in keeping with Fig. 1.

–U₀	blue
Single/missing sheet output	white
Double sheet output	black
Control input C1	violet
Control input C2	pink
Control input C3/Com	grey
ia 1: Colour coding of the con	trol line

colour

brown

g. 1: Colour coding of the control line

# Pointer

+U<sub>B</sub>

- If required, spacing between transmitter and receiver can be adjusted to the local circumstances in the 20 to 60 mm range; see under »Teachin spacing between transmitter and receiver«.
- The coaxiality of transmitter and receiver must be ≤0.5 mm.
- Transmitter and receiver are not to be inclined to each other in excess of 2°.
- Vertical mounting to the sheet is recommended for papers and thin films (Fig. 3a).
- In case of vertical mounting to the sheet, the spacing between transmitter and/or receiver and the sheet running through is not to be under 7 mm.
- In case of thin sheet metals or thicker plastic films (e.g. credit cards), the dbk is to be mounted at a 27° inclination to sheet normal (Fig. 3b).
- Thick papers and paperboard responsible for faulty switching in case of vertical mounting can often be scanned at a 27° to 45° mounting angle to sheet normal. Measuring corrugated card obliquely to the waves makes it possible for even fine corrugated cardboards (G and F and F wave) to be scanned (Fig. 3c).
- Other materials may make a special fitting position necessary. Do contact microsonic when you work with these special materials.
- The max. torque of the nuts is 15 Nm for the M18 and 8 Nm for the M12 sleeves respectively.
- The drill hole must be ≥12 mm given that the transmitter is recessmounted or a sheet feed is envisaged between transmitter and receiver. The recommendation is for a 18 mm diameter (see Fig. 3).

 The line between transmitter and receiver is not to be bridged with an external potential.

# Start-up

→ Select the »Standard« sensitivity class by placing all the 3 control inputs onto logic 0 (see Fig. 4 and Fig. 5) or leave them unconnected.
→ Switch on the dbk+4 voltage supply.

# Pointer

The »Standard« sensitivity class corresponds to the setting of predecessor model dbk-4.

Check the function with a test sheet:
→ Hold a single test sheet within the working range between transmitter and receiver.

The LED must light up green for »Single sheet detected«. Should the LED light up red, then check on the dbk+4 fitting dimension and the selected test sheet.

→ Hold a double test sheet within the working range between transmitter and receiver. The LED must light up red for »Dou-

ble sheet detected«.

→ Remove all the sheets between transmitter and receiver. The LED must flash red for »Missing sheet detected «.


# Pointer

You can use a material of a high sheet weight as the test sheet or the test sheet itself obtainable as an accessory with the »dbk test sheet« article name. This test sheet works as critical material at the ambient temperature in the »Standard« sensitivity class and can be used to examine the correct adjustment and function.


# Factory setting

The dbk+4 are delivered with the following factory settings:

- Free-run mode with 3 sensitivity classes and teach-in
- Missing sheet output on NCC
- Double sheet output on NCC
- 40 or 20 mm spacing

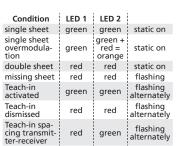



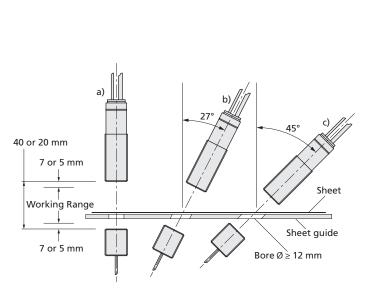

## Operation in the free-run mode

The dbk+4 operates in the free-run mode ex-works. In the free-run mode, the dbk+4 performs measurements cyclically.

## Pointer

If measurements should be taken in the shingled stream, then an external trigger signal can individually trigger each measurement. To this end, the trigger mode can be parameterized with the help of the LCA-2 LinkControl adapter available as an accessory and the LinkControl software.

Logical State	Voltage Level	
Logical State	pnp	npn
0	-U <sub>B</sub>	+U <sub>B</sub>
1	+U <sub>B</sub>	-U <sub>B</sub>

Fig. 4: Voltage level of the logic states at the control inputs

#### Sensitivity classes

The fact that the dbk+4 control inputs are unconnected or on logic 0 points to pre-selection of the »Standard« sensitivity class where the range of sheet material weights from a typical 50 g/m<sup>2</sup> up to 800 g/m<sup>2</sup> can be scanned.

- The 3 control inputs allow the sensitivity classes to be pre-selected in keeping with the Fig. 5 table.
- The »Thin« setting is to be selected for extremely thin materials, such as bible printing paper, with weight per unit areas of under 50 g/m<sup>2</sup>.
- The »Thick« setting is available for sheet metals, thick plastic films, paperboard and finest corrugated card.
- Changes between sensitivity classes can be undertaken under on-going operations.
- Pre-selecting an over-low sensitivity class can result – even with a single sheet – in a double sheet signal appearing. In such an instance, the next-higher sensitivity class is to be pre-selected.
- Pre-selecting an over-high sensitivity class results – given a single sheet – in the double-sheet detection indicating overmodulation at the LEDs: one LED lights up green and the other green/red (orange blend). In such an instance, the next-lower sensitivity class is to be pre-selected.

## Pointer

Parameterization of the D1 switched output onto the »Overmodulation« output function achieved with Link-Control software results in the overmodulation signal being additionally outputted on D1.

# Teach-in

The teach-in mode is also available for materials glued to each other across their full extent (e.g. two wafers bonded with a water film, a spline on a paper web) and special materials which cannot be scanned with one of the 3 sensitivity classes.

→ Select the teach-in mode (C1 and C2 on logic 1) in keeping with the table in Fig. 5.

This is the way to teach-in a material:

- → Place a single sheet of the material in the working range of the double sheet detection.
- → Place the C3 control input on logic 1 for a minimum of 3 seconds. Materials with inhomogeneities must be moved during the teach-in phase so that dbk+4 can detect them.

Success with a teach-in operation is shown by a green LED. In instances of where no material teach-in was possible, dbk+4 flashes in red. Then repeat the operation.

→ On finishing the teach-in operation, either place the C3 control input on logic 0 or leave it unconnected.

The material can now be scanned.

#### Pointer

C3 must not be on logic 1 when the supply voltage is connected.

	C1	C2	C3
Standard	0	0	0
Thick	0	1	0
Thin	1	0	0
Teach-in-Mode	1	1	0
Teach-in active	1	1	1

Fig. 5: Free-run mode: selection of the sensitivity class and Teach-in

#### Parameterization with LinkControl

The dbk+4 can be extensively parameterized under LinkControl. Here you need the optionally available LinkControl adapter LCA-2 and the LinkControl software for Windows<sup>®</sup>.

# Operation onto LinkControl

- → Install the LinkControl software onto your PC.
  - Connect the LinkControl adapter to your PC with the USB cable.
- → Connect dbk+4 to the LCA-2 in keeping with the Fig. 6 table. For this, use the adapter cable in the LCA-2 case.
- → Connect the voltage supply cable to the LCA-2 on the other side of the T connector.
- → Start the LinkControl software and follow the instructions on the screen.

	Colour dbk+4	Colour adapter cable	Pin
+U <sub>B</sub>	brown	brown	1
–U <sub>B</sub>	blue	blue	3
C3/Com	grey	grey	5

Fig. 6: Connecting dbk+4 to the LCA-2

The following settings can be undertaken:

- Numeric input of the spacing between transmitter and receiver
- Function for the D1 switched output

Missing sheet = NCC (single sheet = NOC) or Missing sheet = NOC (single sheet

= NCC) or Overmodulation = NCC or

Overmodulation = NOC

 Function for the D2 switched output Double sheet = NCC or

Double sheet = NOC

- Operating mode
  - Free-run mode with 3 pre-defined sensitivity classes and additional teach-in mode or Free-run mode with 4 indepen-dent teach-in classes or Trigger mode with 2 pre-defined sensitivity classes and additional teach-in mode or Edge- or levelcontrolled trigger mode

Also available is a diagrammatic representation of the readings.

## Operation in the trigger mode

If LinkControl was used to parameterize the trigger mode, then the external trigger signal is to be placed on the C2 control input.

Available in the trigger mode are sensitivity classes »Standard«, »Thin« and the teach-in mode in keeping with the Fig. 7 table.

In the edge-controlled trigger setting (see Fig. 8), the double sheet detection takes a measurement with every edge from 0 to 1. The finding is then stored until the next trigger edge.

	C1	C2	C3
Standard	0	Trigger	0
Thin	0	Trigger	1
Teach-in-Mode	1	Trigger	0
Teach-in active	1	Trigger	1

Fig. 7: Trigger mode: selection of the sensitivity class and teach-in mode

In the level-controlled trigger mode, dbk+4 keeps on taking measurements for as long as the trigger signal is on hand. With dbk+4 deactivated (C2 control input to logic 0), the reading of the last measurement at the switched outputs is frozen (see Fig. 9).

 $\Rightarrow$  Place all the 3 control inputs on logic 1.

→ Switch on the supply voltage: The supply voltage: The LEDs flash alternately red and green.

and receiver.

→ Wait at least 2 seconds. Place the C3 control input on logic 0.

#### Free-run mode with 4 independent teach-in classes Any failu

Parameterization with the aid of Link-

Control of the free-run mode with 4

independent teach-in classes makes

teach-in possible for up to 4 different

materials. As a result, the »Standard«,

»Thick«, »Thin« and »Teach-in mode«

sensitivity classes can be individually

adjusted (see online help in LinkCon-

Teach-in spacing between trans-

Teach-in of the selected spacing bet-

ween transmitter and receiver must be

undertaken should you not have

mounted transmitter and receiver at

the recommended 40 mm or 20 mm

→ Clear the measuring section of

sheet materials between transmitter

mitter and receiver

trol).

spacing.

Any failure to teach-in the set spacing results in dbk+4 flashing in red for 3 seconds.

dbk+4 is operating normally.

 Finally, select the requested type of operation through the control inputs.

### Maintenance

No maintenance is need on the double sheet detection. We would re-commend cleaning the sensor surfaces at the transmitter and receiver should they become very dirty. The best thing is to apply some isopropanol onto a cotton cloth and then wipe the surface clean. Make sure that the reaction time of the cleaner is kept down. That means quickly wiping dry the transducer surfaces.


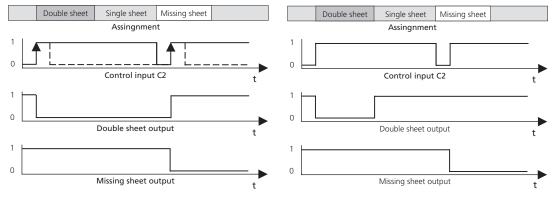


Fig. 8: Trigger mode edge-controlled

Fig. 9: Trigger mode level-controlled

## **Technical data**



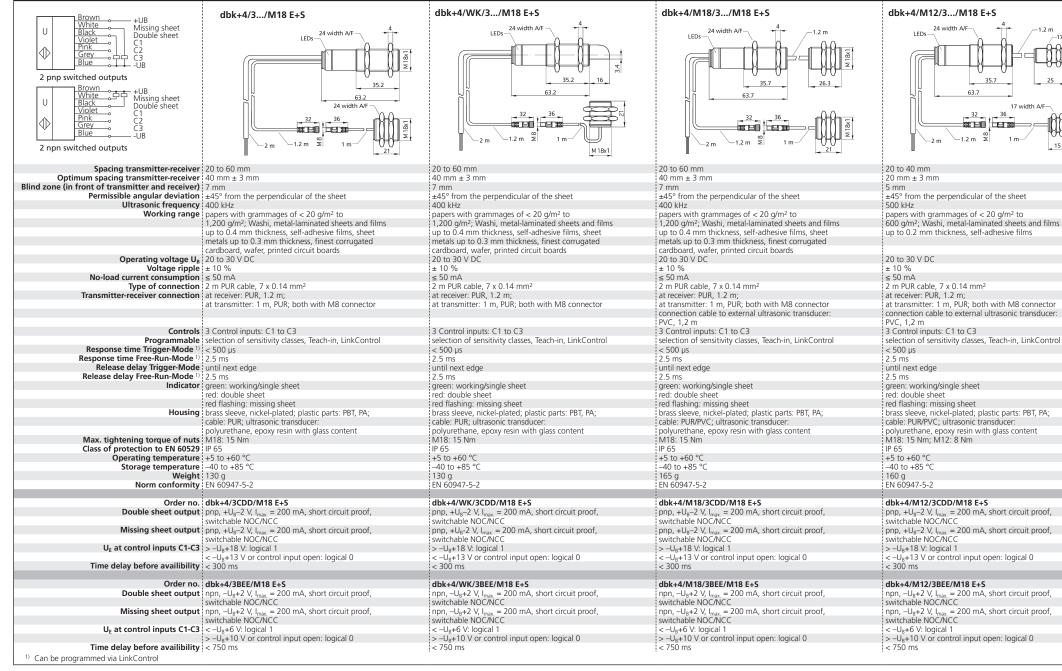



-17 w/ Δ/F

15