WICLOLOUIC



Operating manual mic+ Ultrasonic Sensors with one analogue output and one switched output

mic+25/DIU/TC mic+35/DIU/TC mic+130/DIU/TC mic+340/DIU/TC mic+600/DIU/TC

Product description

- The mic+sensor with one analogue output and one switched output measures the distance to an object within the detection zone contactless. A signal proportional to distance is created and the switched output is set according to the adjusted detect distance.
- The sensor automatically detects the load put to the analogue output and switches to current output or voltage output respectively
- All settings are done with two push-buttons and a three-digit LED-display (TouchControl).
- Light emitting diodes (three-colour LEDs) indicate all operation conditions.
- Choosing between rising and falling output characteristic as well as output function NOC and NCC is possible.
- The sensors are adjustable manually using the numerical LED-display or may be trained using Teach-in processes.
- Useful additional functions are set in the Add-on-menu.
- Using the LinkControl adapter (optional accessory) all TouchControl and additional sensor parameter settings may be made by a Windows-Software.

Important instructions for assembly and application

All employee and plant safety-relevant measures must be taken prior to assembly, start-up, or maintenance work (see operation manual for the entire plant and the operator instruction of the plant).

The sensors are not considered as safety equipment and may not be used to ensure human or machine safety!

The mic+sensors indicate a blind zone, in which the distance cannot be measured. The operating range indicates the distance of the sensor that can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

Synchronisation

If the assembly distances shown in Fig.1 for two or more sensors are exceeded the integrated synchronisation should be used. Connect Sync/Com-channels (pin 5 at the units receptable) of all sensors (10 maximum).

	7	
	≥0.35 m	≥2.50 m
	≥0.40 m	≥2.50 m
	≥1.10 m	≥8.00 m
DIIII	≥2.00 m	≥18.00 m
D	≥4.00 m	≥30.00 m

Fig. 1: Assembly distances, indicating synchronisation/multiplex

Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected.

The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. (To use synchronised mode all sensors must be set to address »00«.)

machinery NFPA 79 applications.

Assembly instructions

- Assemble the sensor at the installation lo-
- Plug in the connector cable to the M 12 connector.

2 • • 1 3 • 5 • 4	_	colour
1	+U _B	brown
3	-U _B	blue
4	D	black
2	IU	white
5	Sync/Com.	grey

Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

Start-up

mic+ sensors are delivered factory made with the following settings:

- Rising analogue characteristic
- Window margins for the analogue output set to blind zone and operating range
- Switched output on NOC
- Detecting distance at operating range
- Measurement range set to maximum

mum 32 Vdc, minimum 290 mA, in the final in-

Set the parameters of the sensor manually or use the Teach-in procedure to adjust the de-

 


Fig. 3: TouchControl


Operation

mic+sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick lavers of dirt and cakedon dirt affect sensor function and therefore must be removed.

- mic+sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- If an object is within the set window margins of the analogue output, then LED D1 lights up green, if the object is outsite the window margins, then LED D1 lights up red.
- The load put to the analogue output is detected automatically when turning supply voltage on.
- During normal mode operation, a yellow LED D2 signals that the switched output has connected.
- During normal mode operation, the measured distance value is displayed on the LED-indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits. Alternatively a percentage scale may be set in the add-on menu. In this connection 0 % and 100 % correspond to the set window margins of the analogue output.
- In the »Two-way reflective barrier« operating mode, the object has to be within the range of 0-85 % of the set distance.
- During Teach-in mode, the hysteresis loops are set back to factory settings.
- If no objects are placed within the detection zone the LED-indicator shows »- - -«.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal mode operation.

Show parameters

Tapping push-button T1 shortly during normal mode operation shows »PAr« on the LED-display. Each time you tap push-button T1 the actual settings of the analogue output and the switched output are shown.

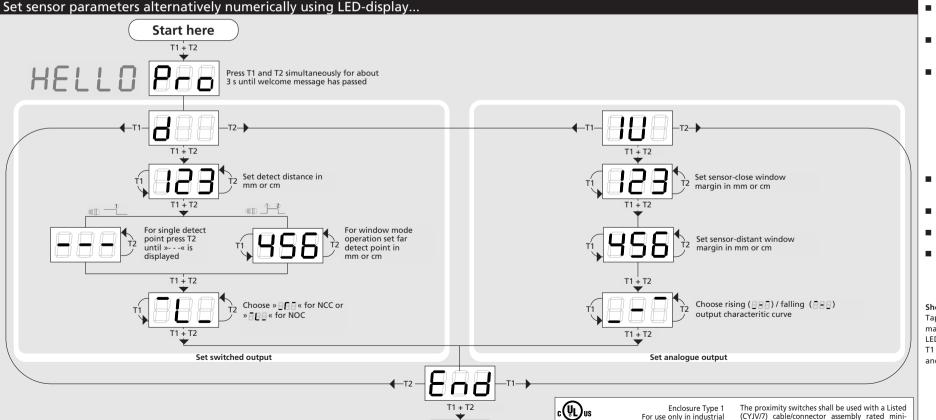

Ready

