wictolouic



Operating manual sks-15/CI sks-15/CU

Ultrasonic proximity switch with one analogue output

Product Description

The sks sensor offers a non-contact measurement of the distance to an object which must be positioned within the sensor's detection zone. Depending on the set window limits, a distance-proportional analogue signal is output.

Via the push-button, the detect distance and operating mode can be adjusted (Teach-in). Two LEDs indicate operation and the state of the output.

Safety Notes

- Read the operating manual prior to start-up.
- Connection, installation and adjustment works may only be carried out by expert personnel.
- No safety component in accordance with the EU Machine Directive.

Proper Use

sks ultrasonic sensors are used for non-contact detection of objects.

Installation

- Mount the sensor at the installation site.
- Maximum torque of screws: 0.5 Nm
- Connect a connection cable to the M8 device plug, see fig. 1.

$\begin{pmatrix} 2^{\bigcirc} & \bigcirc_4 \\ \bigcirc & \bigcirc \\ 1 & 3 \end{pmatrix}$		colour
1	+U _B	brown
3	-U _B	blue
4	U/I	black
2	Com	white

Fig. 1: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

Start-Up

- Connect the power supply.
- Carry out the adjustment in accordance with the diagram.

Factory Setting

 Rising analogue characteristic curve between the blind zone and the operating range.

Synchronisation

If several sensors are mounted close to another, they should be synchronised with each other. This is done by an externally provided synchronisation signal.

 Apply a square-wave signal to pin 2 with pulse width t_i and cycle time t_p (see fig. 2 and technical data). Any amount of sensors may be synchronised with this external synchronisation signal.

A high level on pin 2 will deactivate the sensor.

 


Fig. 2: External synchronisation signal

Checking operation mode

■ In normal operating mode shortly press the Teach-in button.

The green LED stops shining for one second, then it will show the current characteristic of the analogue output:

1 x flashing = rising 2 x flashing = falling

Maintenance

sensor surface.

Notes
■ Every time the power supply is switched on, the sensor detects its actual operating temperature and transmits it to the internal temperature compensation. This results in a slight correction of the analogue output value after 45 seconds

microsonic sensors are maintenance-

free. In case of excess caked-on dirt

we recommend cleaning the white

- If the sensor was switched off for at least 30 minutes and after power on an object is placed in the middle of the adjusted analogue window for 30 minutes (the analogue output value is in the range of 11 to 13 mA or 4.4 to 5.6 V) a new adjustment of the internal temperature compensation to the actual mounting conditions takes place.
- The sks sensor has a blind zone, within which distance measurements are not possible.
- In the normal operating mode, an illuminated orange LED signals that the object is within the adjusted window limits.
- If the Teach-in button is not pressed for 30 seconds during the Teach-in setting, the settings made hitherto are deleted.
- The sensor can be reset to its factory setting (see »Further settings«).

