ωιςιογουις



Operating Manual mic+ Ultrasonic Sensors with one switching output an one analogue putput mic+25/DIU/TC mic+35/DIU/TC mic+130/DIU/TC mic+340/DIU/TC mic+600/DIU/TC

- Product description ■ The mic+ Sensor with one analogue output and one switching output measures the distance to an object within the detection zone contactless. A signal proportional to distance is created and the switching output is set according to the adjusted detect
- distance. The sensor automatically detects the load put to the analogue output and switches to current output or voltage output respectively.
- All settings are done with two pushbuttons and a three-digit LED-display (TouchControl).
- Three-colour LEDs indicate all operation conditions.
- Choosing between rising and falling output characteristic as well as output function NOC and NCC is possible.
- The sensors are adjustable manually

via TouchControl or via Teach-in procedure.

- Useful additional functions are set in the Add-on-menu.
- Using the LinkControl adapter (optional accessory) all TouchControl and additional sensor parameter settings can be adjusted by a Windows® Software.
- The mic+ Sensors have a blind zone in which distance measurement is not possible. The operating range indicates the distance of the sensor that can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

Safety Notes


- Read the operating instructions prior to start-up.
- Connection, installation and adiustment works may only be carried out by expert personnel.
- No safety component in accordance with the EU Machine Directive

Proper Use mic+ ultrasonic sensors are used for

non-contact detection of objects.

Synchronisation

If the assembly distance of multiple sensors falls below the values shown in Fig. 1 the integrated synchronisation should be used. Connect Sync/ Com-channels (pin 5 at the units receptable) of all sensors (10 maximum).

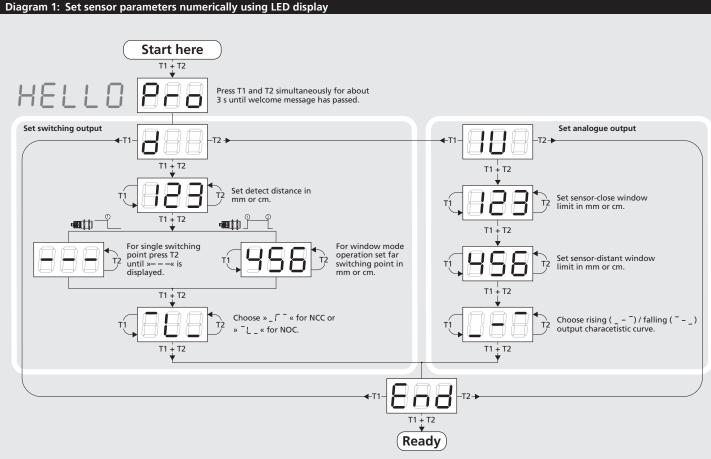

D↔O mic+25. ≥0.35 m ≥2.50 m mic+35... ≥0.40 m ≥2.50 m mic+130... ≥1.10 m ≥8.00 m ≥18.00 m mic+340... ≥2.00 m mic+600... ≥4.00 m ≥30.00 m

Fig. 1: Assembly distances, indicating synchronisation/multiplex

Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/ Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected. The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. To use synchronised mode all sensors must be set to address »00«.

Installation

- → Assemble the sensor at the installation location.
- \rightarrow Plug in the connector cable to the M12 connector, see Fig. 2.




Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

- → Set the parameters of the sensor manually via TouchControl (see Fig. 3 and Diagram 1)
- \rightarrow or use the Teach-in procedure to adjust the detect points (see Diagram 2).

Measuring Range 188 3-digit LED-display -LED D1 and D2 -Push-buttons T1 and T2 T1 D1D2 T2

Fig. 3: TouchControl/LED display

Factory setting

- Rising analogue characteristic
- Window limits for the analogue output set to blind zone and operating range

- Detecting distance at operating ran-
- Measurement range set to maximum range

Maintenance

mic+ Sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and caked-on dirt affect sensor function and therefore must be removed.

Notes

- mic+ Sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- If an object is within the set window limits of the analogue output, then LED D1 lights up green, if the object is outsite the window limits, then LED D1 lights up red.
- The load put to the analogue output is detected automatically when turning supply voltage on.
- During normal operating mode, a yellow LED D2 signals that the switching output has connected.
- During normal operating mode, the measured distance value is displayed on the LED-indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits. Alternatively a percentage scale may be set in the add-on menu. In this connection 0% and 100% correspond to the set window limits of the analogue output.
- During Teach-in mode, the hysteresis loops are set back to factory settinas.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal operating mode.

Show parameters

→ In normal operating mode shortly push T1. The LED display shows »PAr «


Each time you tap push-button T1 the actual settings of the analogue output are shown.

- Switching output on NOC


colour brown blue black white grey

- Start-up

 \rightarrow Connect the power supply.

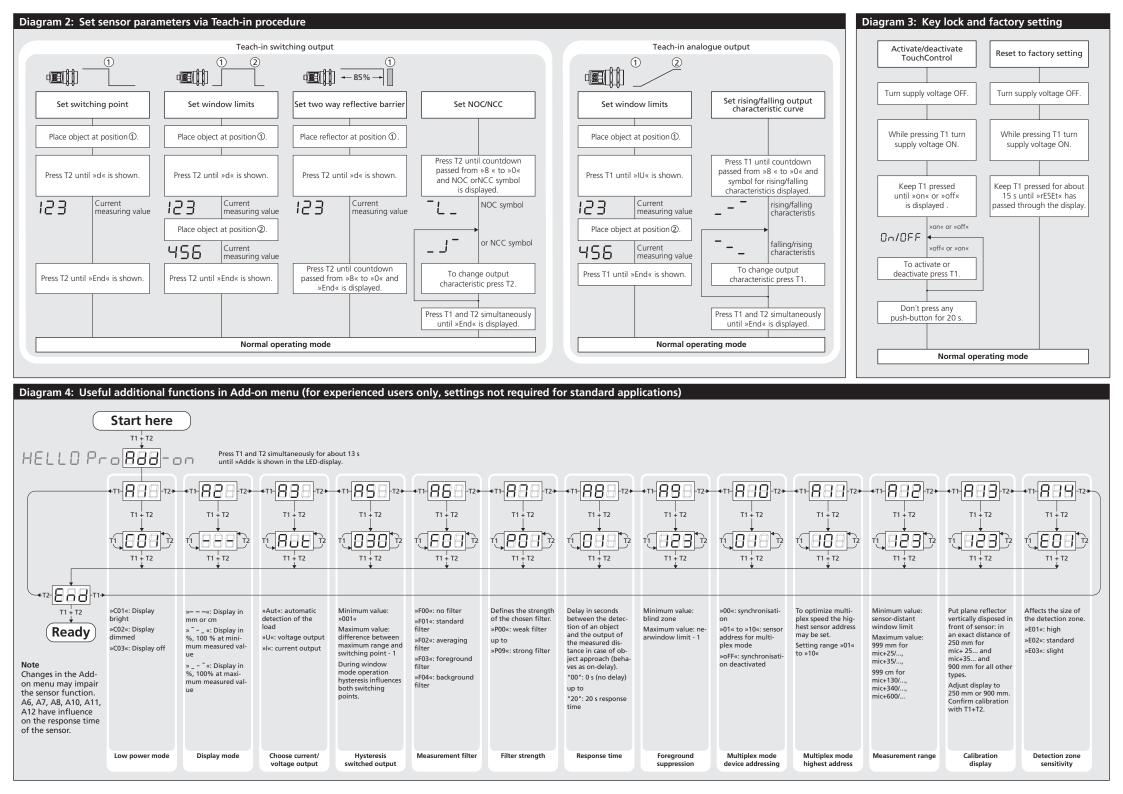



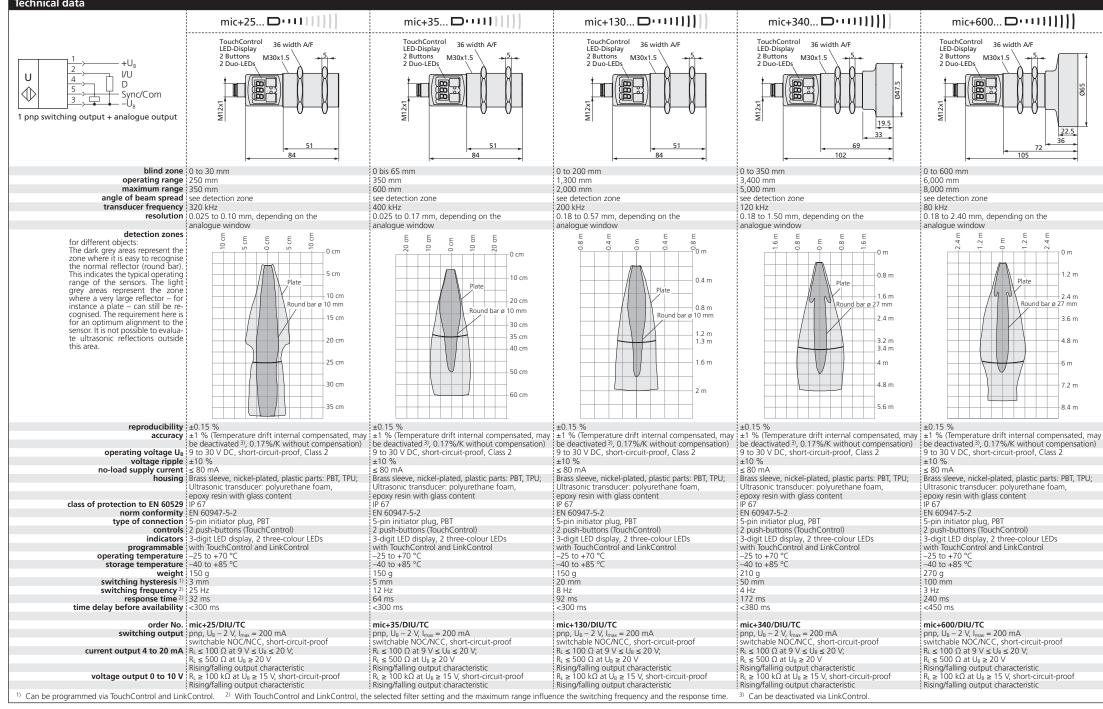

c(UL)us

LISTED

microsonic GmbH / Phoenixseestraße 7 / 44263 Dortmund / Germany / T +49 231 975151-0 / F +49 231 975151-51 / E info@microsonic.de / W microsonic.de The content of this document is subject to technical changes. Specifications in this document are presented in a descriptive way only. They do not warrant any product features.

Enclosure Type 1 The proximity switches shall be used with a For use only in industrial Listed (CYJV7) cable/connector assembly ra-ery NFPA 79 applications. machinery NFPA 79 applications. the final installation



