wictotouic



Operating manual
Ultrasonic proximity switch
with one analogue output

pms-15/CI/A1 pms-25/CI/A1 pms-35/CI/A1 pms-100/CI/A1 pms-15/CU/A1 pms-25/CU/A1 pms-35/CU/A1 pms-100/CU/A1

Product description

The pms sensor has a stainless steel housing and is designed for applications with hygienic requirements. The ultrasonic transducer surface of the pms sensors is laminated with a PTFE film. The transducer itself is sealed against the housing by a joint ring made of FKM. The pms sensor with D12 adapter shaft can be fitted in a mounting clip which meets hygiene standards like the sensor screw connection BF-pms/A1.

The special housing design ensures that any cleaning fluids are able to run off completely, regardless of the installation situation. The pms sensor is ECOLAB and EHEDG certified.

The pms sensor offers a non-contact measurement of the distance to an object present within the sensors's detection zone.

In dependence of the set window limits, a distance-proportional analogue signal is output.

For sensor setting, the accessory Link-Control adapter LCA-2 is recommended in combination with LinkControl software for Windows[®]. Alternatively, the sensor can also be set by Teach-in via pin 2.

Safety instructions

- Read the operating manual prior to start-up.
- Connection, installation and adjustments may only be carried out by qualified staff.
- No safety component in accordance with the EU Machine Directive, use in the area of personal and machine protection not permitted.

Use for intended purpose only

pms ultrasonic sensors are used for non-contact detection of objects. The sensor must be mounted in an EHEDGapproved mounting clip, such as the sensor screw connection BF-pms/A1 for a EHEDG-compliant use.

Installation

- → Assemble the sensor and its hygienic D12 sensor screw connection BF-pms/A1 or an equivalent sensor mounting clip at the installation location.
- → Pull sensor cable through the sensor gland, connect it to the M8 sensor plug, see Fig. 1.
- → Push the sensor with its shaft into the sensor screw connection BFpms/A1 and align the sensor (see Fig. 3 to Fig. 5). Tighten with lock nut (maximum tightening torque 30 Nm).

Start-up

- → Connect the power supply.
- → Carry out sensor adjustment with LinkControl or alternatively Teach-in procedure in accordance with Diagram 1.




Fig. 1: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

Factory setting

 Rising analogue characteristic curve between the blind zone and the operating range

Maintenance

microsonic sensors are maintenancefree. For cleaning in areas with hygienic requirements, access to the sensor must be guaranteed from all EHEDG. The pms sensor is ECOLAB certified. Observe the following points when cleaning:

- → Use the cleaning agents listed in the ECOLAB certificate to clean the sensors (the certificate is available for download on the pms sensor page on microsonic.de).
- → If other cleaning agents are used, first test whether the sensor materials (stainless steel, FKM, PTFE) are resistant to them.

- → Observe the allowed maximum cleaning temperature of 85 °C.
- → The use of a high-pressure cleaner is not permitted.
- → Do not remove caked-on material from the sensor membrane with sharp objects.
- → Do not damage the sensor membrane.

Notes

- The sensors of the pms family have a blind zone, within which a distance measurement is not possible.
- If several pms sensors are operated in a small space, the minimum mounting for parallel or opposite arrangement of the sensors shown in Fig. 2 must be maintained.

		D⊹a
pms-15	≥0.25 m	≥1.30 m
pms-25	≥0.35 m	≥2.50 m
pms-35	≥0.40 m	≥2.50 m
pms-100	≥0.70 m	≥4.00 m

Fig. 2: Assembly distances to avoid a mutual influence of the sensors

- The pms sensors are equipped with an internal temperature compensation. Due to the sensors self heating, the temperature compensation reaches its optimum workingpoint after approx. 45 seconds of operation.
- The sensor can be reset to its factory settings (see »Further settings«, Diagram 1).
- For Teach-in procedure when using the LinkControl adapter (optional accessory) the additional adapter 5G/M12-4G/M12/M8 is needed.

Notes on installation

■ If the sensor is cleaned wet, all surfaces must be inclined at least 3° from the horizontal alignment so that the cleaning agents can run off completely (see Fig. 3 to Fig. 5). There is a risk that condensate or dripping water might drip from the sensor and mounting brackets into the product area.




Fig. 3: pms sensor D12-adapter shaft with sensor screw connection BF-pms/A1, all surfaces must be inclined at least 3°

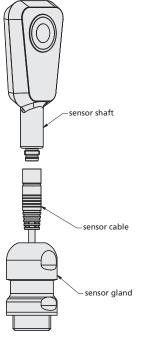
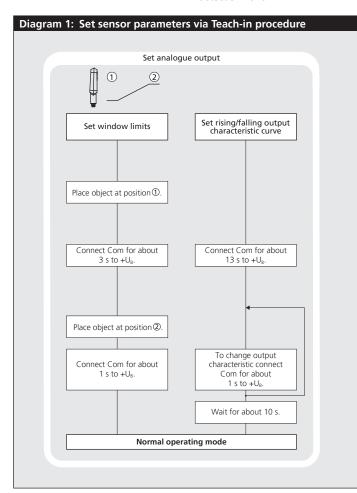
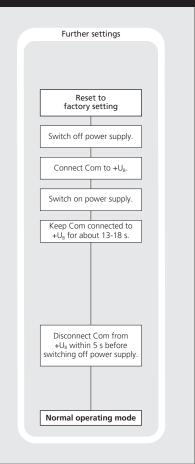
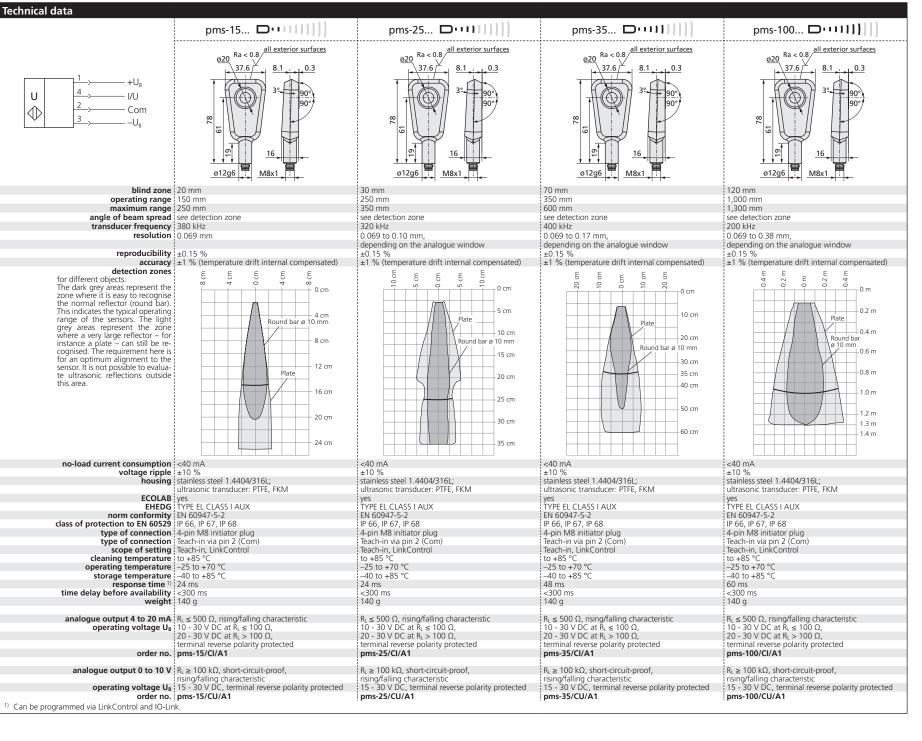


Fig. 4: Mounting of pms sensor with sensor screw connection BF-pms/A1

- The D12 adapter shaft of the pms sensor has to stick out 7±1 mm from the screw connection for hygienic mounting (see Fig. 4 and Fig. 5).
- The sealing ring has to fill space between D12 sensor shaft and cap nut. Sealing ring should not to be pressed out excessively from the shaft gland.







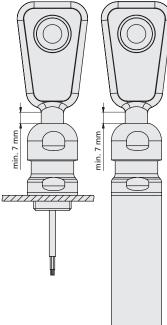


Fig. 5: pms sensor D12 adapter shaft with sensor screw connection BF-pms/A1 mounted to machine part or to stainless steel tube D26.8 with internal thread M20x1.5

Mounting accessory

■ D12 sensor screw connection BFpms/A1

Accessory for programming

- LinkControl adapter LCA-2
- Adapter 5G/M12-4G/M12/M8



Enclosure Type 1 For use only in industrial machinery NFPA 79 applications.

The proximity switches shall be used with a Listed (CYJV/7) cable/connector assembly rated minimum 32 Vdc, minimum 290 mA, in the final installation

